


# spiderstar VoIP Interface

## Version 4.0 User manual

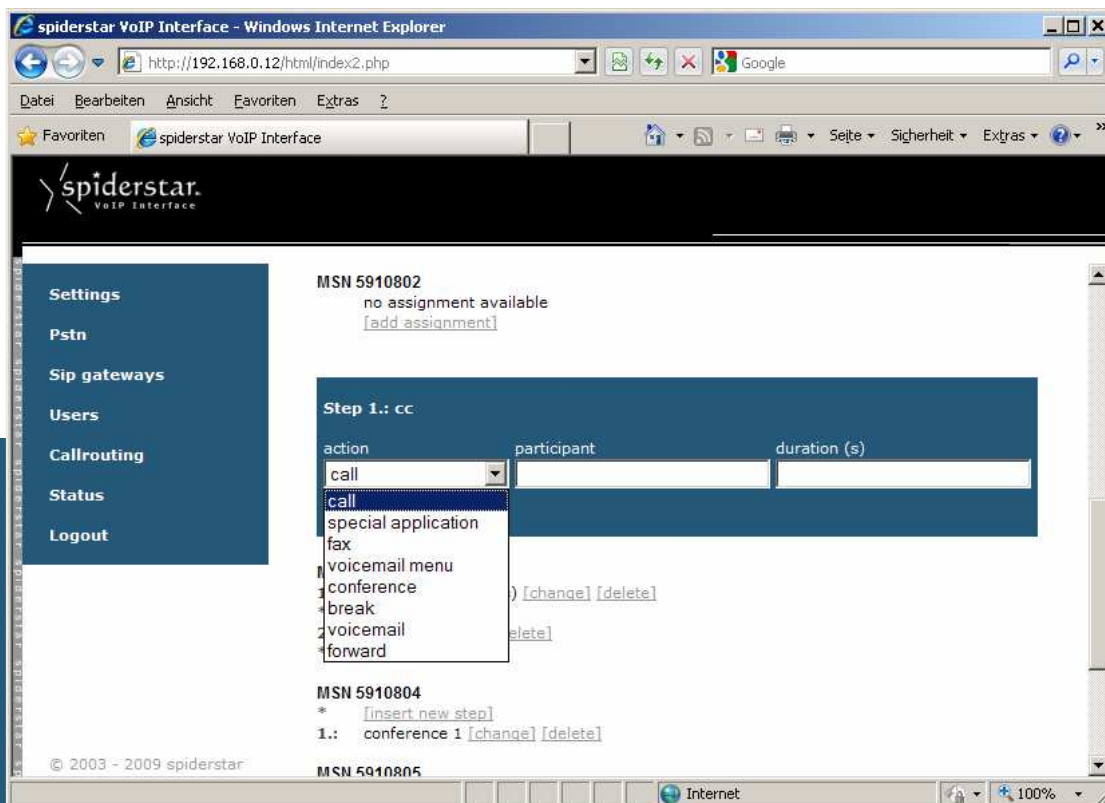

Contents	
1	Introduction ..... 3
2	Setup ..... 4
2.1	on an existing VMWare Server or -Player..... 4
2.2	on an existing Linux server..... 4
3	Features ..... 5
3.1	Logon ..... 5
3.2	General settings..... 5
3.3	DIDs..... 6
3.4	Services..... 6
3.5	Users ..... 8
3.6	Callrouting ..... 10
3.7	Status->cdr..... 13
4	Special applications..... 14
4.1	special applications..... 14
4.2	voicemailmenu..... 14
4.3	transfer..... 14
4.4	conference rooms..... 14
4.5	database connection to cdr..... 14
4.6	branch offices ..... 14
4.7	Time based routing..... 14
4.8	Sending faxes..... 14

## 1 Introduction

With spiderstar VoIP Interface, you can turn any server into a multi-functional communications center in moments; our software provides you with an immediately-deployable VoIP server which is fully-customizable via an easy-to-use web-interface. Available functions include fax mode, voicemail and customizable voice menus.

Why use spiderstar VoIP?

- Complete VoIP telephony system (SIP Protocol) with unlimited number of users (3 subscribers offered free of charge)
- Possibility of connecting to internet telephone services
- Voice messages forwarded via email or made accessible through a voicemail system
- Fully-integrated fax server (fax/email gateway) for both incoming and outgoing faxes – inclusive of T.38 support (error-free, internet-based faxing)
- Menu-driven operation via a web-interface
- Multilingual: German, English, Spanish and French languages available at present
- WLAN-optimized: make calls over currently-laid wiring
- Connect your home office/other location to your main office via almost any DSL connection using a VPN
- Simple video conferencing
- Hold telephone conferences in up to five conference rooms simultaneously
- Define preferred 'hold' music with a personally-chosen MP3
- Easy creation of voice menus (e.g. 'Choose 1 for general information, 2 for...')
- Interface adaptable to every specific requirement

## 2 Setup

### 2.1 on an existing VMWare Server or -Player

To install the spiderstar VoIP Interface on a VMWare Server you need to download the recent VMWare Image at

<http://download.spiderstar.com/vmware>

After unpacking the image it can be started automatically with a VMWare player or it can easily be imported in an existing VMWare server. After running the image it will automatically download the recent version of spiderstar VoIP Interface (on port 80) and save it to the VMWare image. Because of this please be aware that the VMWare image already has internet access on first boot.

When the download has finished you will be able to do settings directly on the vmware console, e.g. changing the ip address.

### 2.2 on an existing Linux server

For setting up spiderstar VoIP Interface on an existing Linux server please download the recent version of the software with the following command

```
wget http://download.spiderstar.com/linux/spiderstar-latest.tar.gz
```

and store it in the root directory of your server.

After unpacking the archive

```
tar xfz /spiderstar-latest.tar.gz
```

please copy the init script that you can obtain at

<http://download.spiderstar.com/linux/startup-script/spiderstar>

in the following directory

```
/etc/init.d/
```

If you want to start the voip server automatically on system boot please set the appropriate links, e.g.

```
ln -s /etc/init.d/spiderstar /etc/rc3.d/S30spiderstar
```


```
ln -s /etc/init.d/spiderstar /etc/rc0.d/K10spiderstar
```

### 3 Features

#### 3.1 Logon

The system can be accessed using the web interface. Therefore enter the system's ip address in the web browser. Having entered the username and password in the logon screen press ok to enter the configuration menu.

If you logon the first time the username will be 'Administrator' and the password is '9999'.

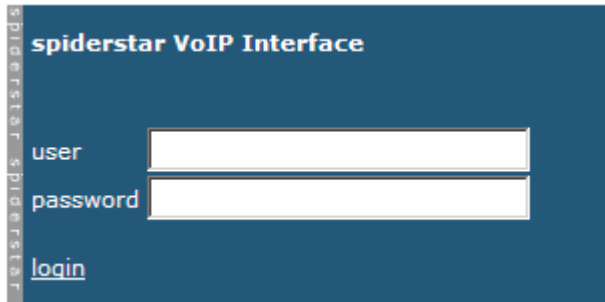

The image shows a web-based login interface for Spiderstar VoIP. It features a dark blue header with the text 'spiderstar VoIP Interface'. On the left, the word 'spiderstar' is repeated vertically. The main content area has two white input boxes labeled 'user' and 'password'. Below the 'password' box is a blue button labeled 'login'.

#### 3.2 General settings

A new nameserver can be set in the section 'general settings' as well as a new smarthost.


A nameserver is needed e.g. for sending voicemails to the specified email address and for registering with ip gateways.

The FQDN is the dns name or the external ip address that points to your spiderstar.net pbx system. For example a FQDN/extern ip address is needed by some ip gateways to allow registering behind a nat firewall. You will have to try out wheather your provider will need this to be set or not.

To reload settings that you made e.g. in the section 'msn', you will have to use the 'reload settings' button in 'general settings'.

Using the button 'software update' you are able to update your pbx system with service packs you received from the support.

To upload your individual music on hold you are able to upload an mp3 file (up to 10 MB) using the function 'add mp3'. Music on hold is played automatically while transferring a caller or placing someone on hold. You can upload multiple files that are going to be played one after the other.

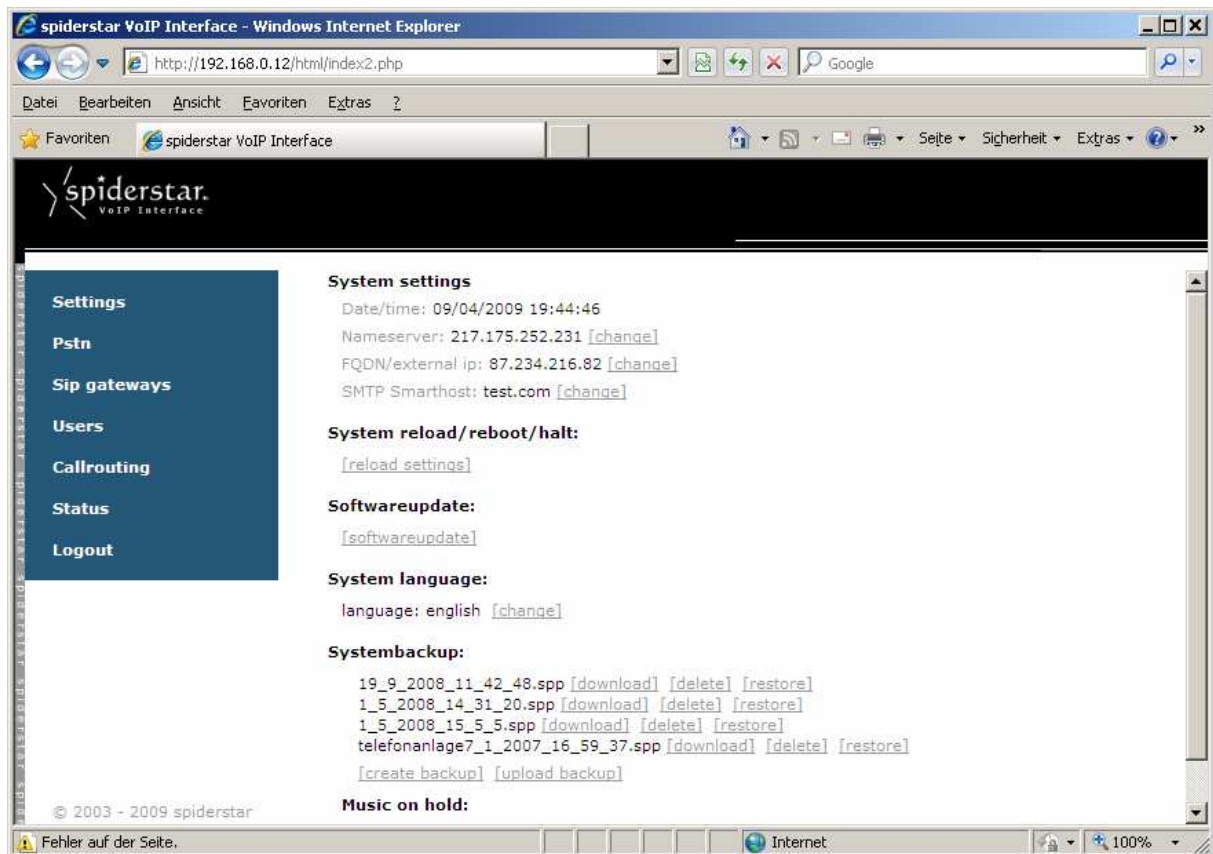

### 3.3 DIDs

Menu point `PSTN` allows the administration of external DID numbers. These will be saved in a list. To use those DID numbers your VoIP gateway has to support signaling of those numbers. If your voip gateway doesn't support signaling of DID numbers incoming calls will be routed to the base number of your provider that is automatically inserted in `Callrouting` when enabling the option `allow incoming` in the settings of a VoIP gateway.

### 3.4 Services

If you want to connect to an ip gateway for calling participants in the whole world you will have to enter these gateways in the `sip gateways` section below the `Services` menu point.

For adding a new server please press `add new server`. After that enter the name of the gateway, the servers ip address or dns name, username and password for connecting to the server. Signaling is either SIP or IAX2. Please consult your carrier what type of signaling to use.

If you also want to accept incoming calls please enable `allow incoming`.

You need to set `NAT=yes` to connect to an ip gateway if you are behind a firewall and don't have a public ip address assigned to your server. Also you will have to set your external ip address in the `general settings` section. Some carriers also require a `NAT=fromdomain` and a `NAT=fromuser` setting.

Also some gateways have the possibility to redirect calls. If you want to enable this feature check `allow forwarding`. Be very careful with that since the pbx system will dial every number your recipient redirected his phone to. E.g. if your recipient set his phone to a premium service your pbx will dial this number and you will have to pay for this.


Below the sip servers you will find a section called `callrouting table`. Using this section you can define what service should be using dialing what number.

The area code defines the digits that should be dialed for the specified service. E.g. if you define '0' as area code every number beginning with '0' is dialed with the specified gateway.

`crop first.. .digits` means that the first 'n' digits of your number are going to be cropped from the dialed number. E.g.: if you dial the number 0043 12345 on your phone and crop the first 2 digits the number 4312345 is going to be dialed.

If you define a number in `add prefix` a prefix is added before the dialed number. e.g. if you dial the number 0043 12345 on your phone and add the prefix 01080 the number 01080004312345 is going to be dialed.

`provider` is the ip gateway you had entered in the `sip gateways` section before.

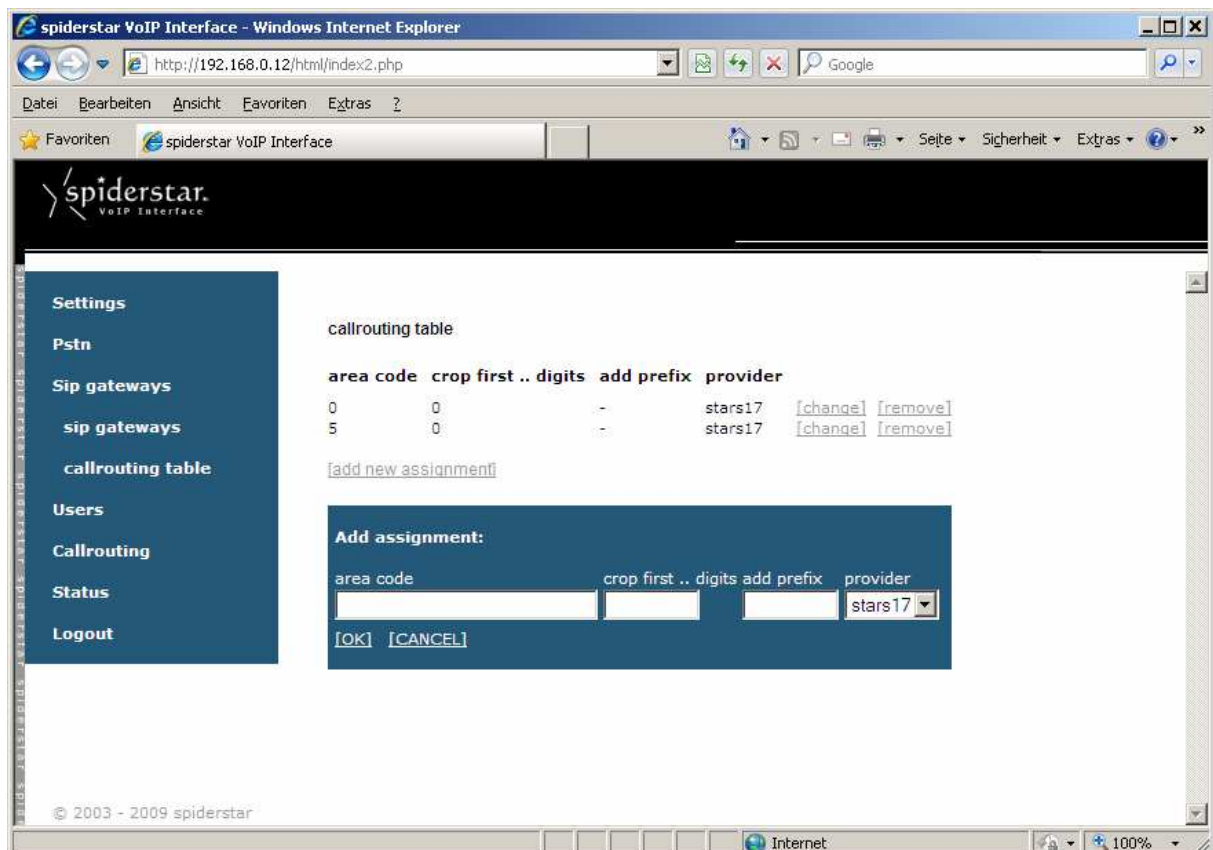

### 3.5 Users

Using the `users` section you can define internal participants that are able to connect to the pbx using sip protocol.

`username`

login name for the web configuration panel.

`internal number`

The number where the user can be reached internally. This number is used in the 'callrouting' section. The internal number of the user 'Administrator' is the number for the voicemail menu.

`numeric password`

Password for the user that is used to authenticate at the voicemail menu and to identify the user's sip phone.

`email address`

email address of the participant where voicemails and fax2emails should be routed to.

`internal voicemailbox on absence`

The voicemailbox will answer on internal calls if the sip phone isn't logged on.

`internal voicemailbox no response`

The voicemailbox will pickup if the user doesn't answer after 'n' seconds.

`voicemailbox internal on busy`

The internal voicemailbox will pickup if the user is busy.

`voicemailbox internal always`

The internal voicemailbox will pickup always (no internal calls will be accepted).

`callgroup`

An incoming call on a phone that belongs to a callgroup can be picked up by another user who belongs to the same callgroup. The user can do this by dialing \*8 on his phone.

`Send voicemails`

Defines whether the system should send voicemails to the user's email address in case someone left a voicemail message. If not checked the user will only be able to get his voicemails using the voicemail menu.

`Say callerid / announce time`

Defines whether user hears the callerid respectively the calling time when checking his voicemailbox.

`Store no voicemails`

If set there will be no voicemails stored on the server and user will not be able to retrieve his voicemails with the voicemail menu.

`Billing account`

Account for that user that will be stored in the db for every call. Important for later billing.

#### CLIP

Callerid presentation. The callerid that will be displayed on the called phone when making phone calls.

#### Direct connection

If checked the server tries to make direct connections between users and speech is not routed through the server (allow reinvite).

#### DTMF-Mode

If set to digital DTMF tones will be transmitted using the RFC2833 standard. Otherwise they will be transmitted via audio.

#### NAT-Mode

If set the user will be regarded as ,behind a firewall'. This is only useful if your voip server is located outside the firewall.

#### Port


Port for sip users. Default is 5060.

#### Qualify

Sometimes it is necessary that the status (online/offline) of a user is checked periodically.

#### Codecs


Defines the possible codecs and speech compression for the given user. Alaw and ulaw (g711) define uncompressed speech processing while g729 uses compression. Please note that g729 requires the purchase of an appropriate license.

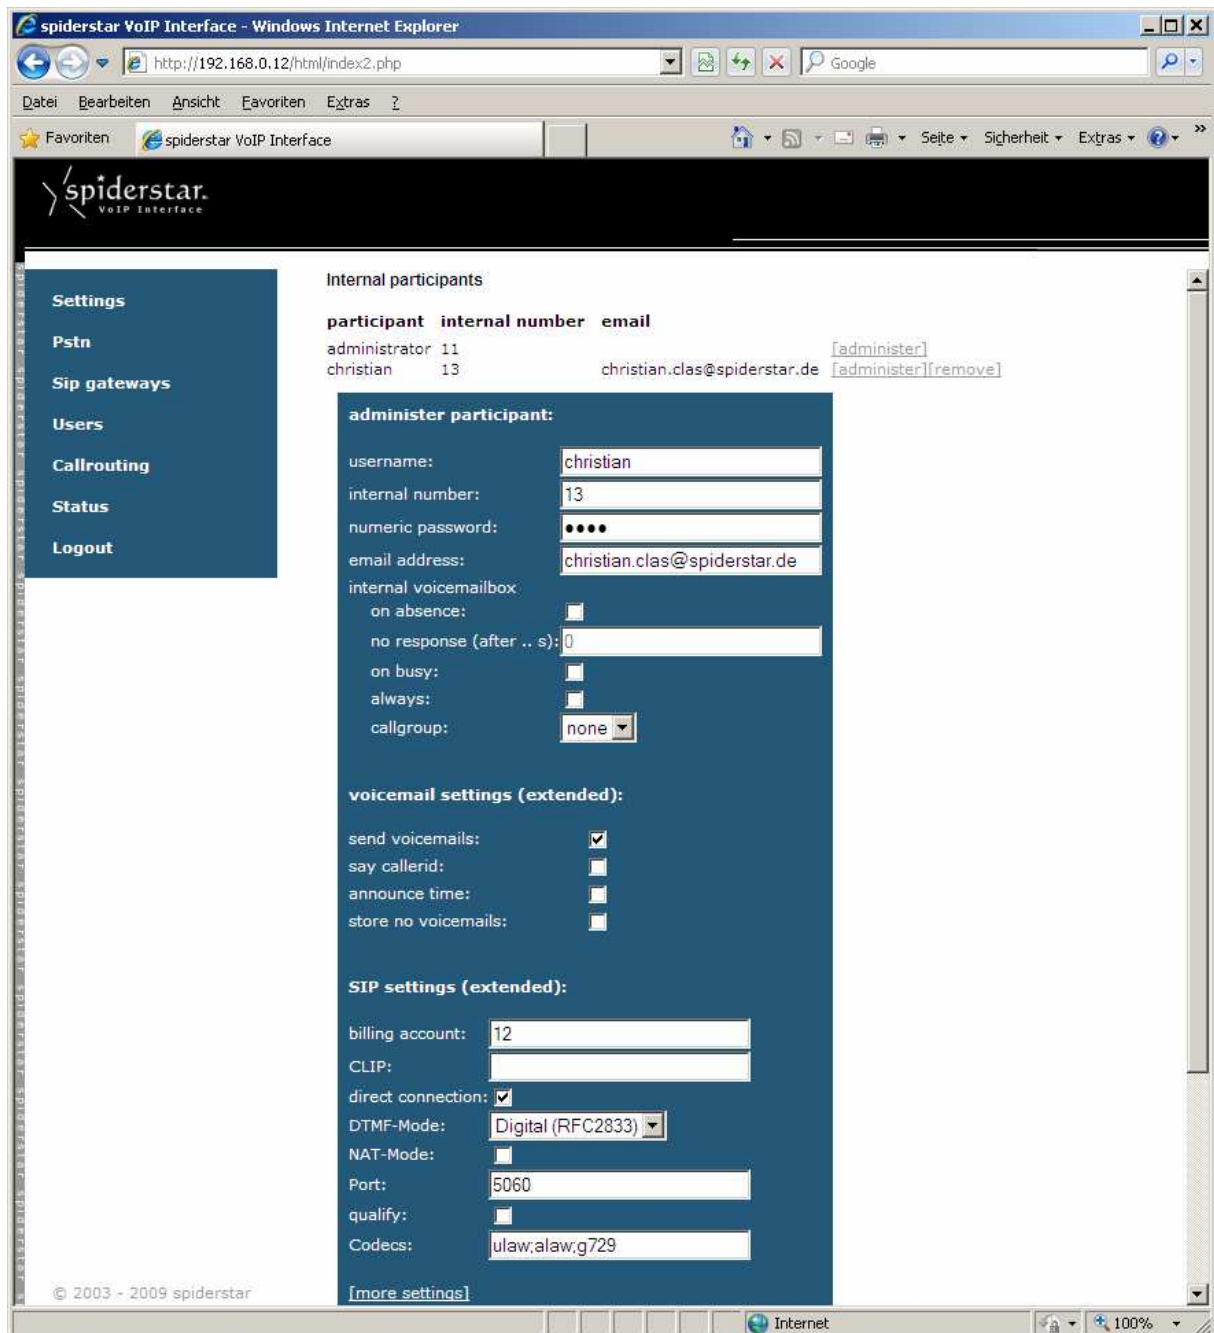

### 3.6 Callrouting

Using the callouting section you can define what should happen when a call is received. Every did and every ip gateway (where accept incoming is flagged) will be listet in that section.

Below every entry you have the possibility to define new assignments. Every assignment is one step in the callrouting table. And in every step you are enabled to do different actions like 'call' a participant or let answer the voicemailbox.

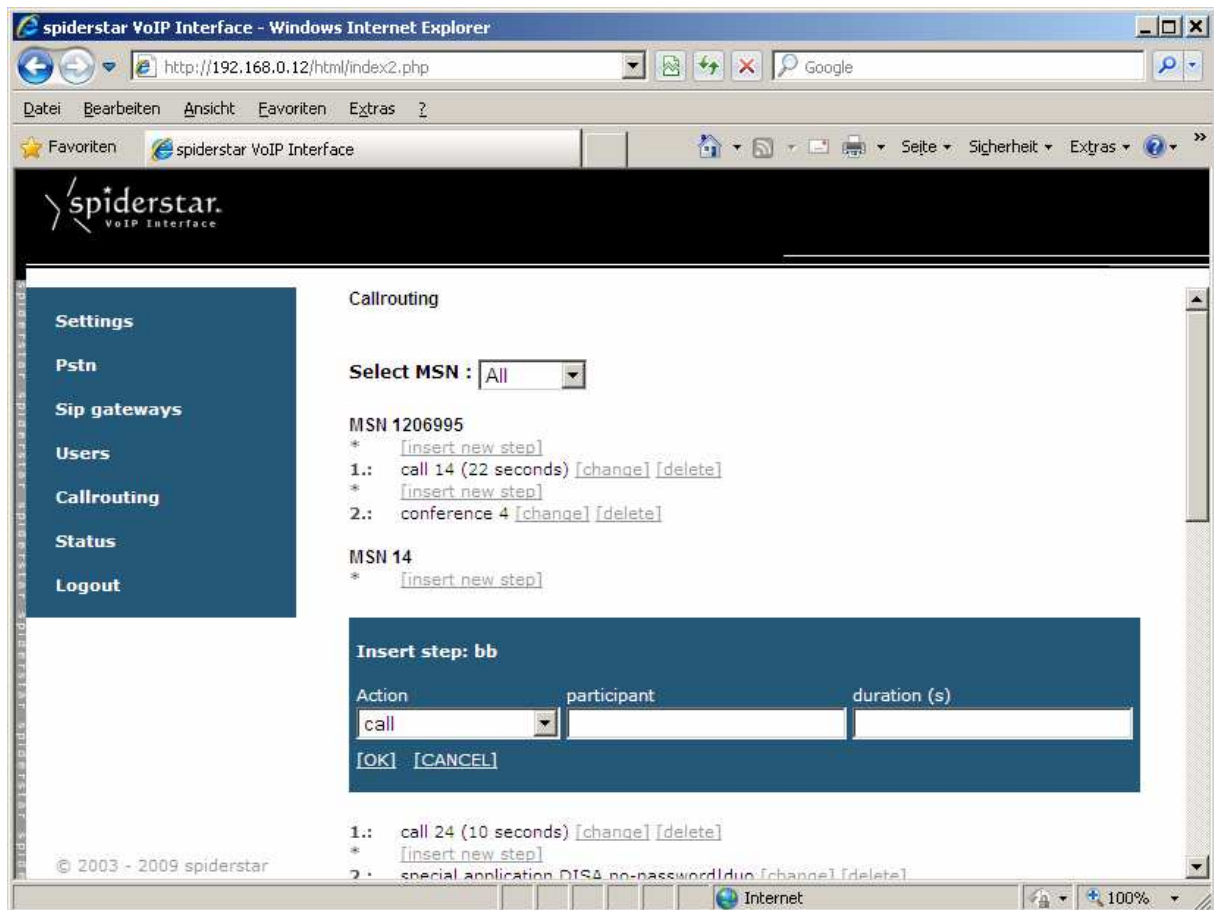

new assignment

Clicking on the button 'new assignment' respectively 'insert new step' a box appears where you are able to define what actions should be performed in the specific step.

change

pressing the change button allows you to change a specific action.

delete


Pressing delete removes a specific step or action.

You can choose among the following actions:

Call	<p>The action 'call' dials a specific internal participant who was entered in the 'users' section. This can be an ip address, the internal number of a participant, or the participants name.</p> <p>If you want to enter an ip address you will have to enter the ip address as the 'name' of the user in the 'users' section.</p> <p>If you specify a 'duration' only the participant is only called the time you entered (in seconds). After that time the next step will be performed.</p> <p>If no other step is available the caller will hear a busy tone.</p>
Voicemail	If you select voicemail the caller will be connected to the voicemailbox of the specified internal user.
forward	Using the action 'forward' you can forward a user to a given number
voicemail menu	To listen to your voicemails from remote you can call your voicemail menu.
fax	Having set the 'fax' action, incoming faxes will be redirected to the users email address. So 'internal number' is the internal number of the user the fax should be sent to by email (.pdf attachment).
conference	5 conference rooms enable participants to meet each other virtually.
break	break causes the pbx system to wait 'n' seconds before doing the next step.
special application	If you have special requirements the support may help you realizing these requirements using special applications.
ivr	<p>Using an ivr (interactive voice response) menu a user specific announcement can be uploaded as wav file. With the 'dimension' it is possible to define how many options the caller are given. A dimension of '0' means that there is only the uploaded announcement played back to the user and after that the caller is redirected to the next step.</p> <p>If the user is enabled to select an option by pressing a number on his phone (dimension &gt; 0) there will be new numbers available in the callrouting section – automatically named IVRx-n whereas x ist he number of the ivr menu (automatically assigned) and n ist he possible option for the user. Below these newly generated numbers new steps can be assigned.</p>

### 3.7 Status->cdr

In the cdr section every call is going to be logged.

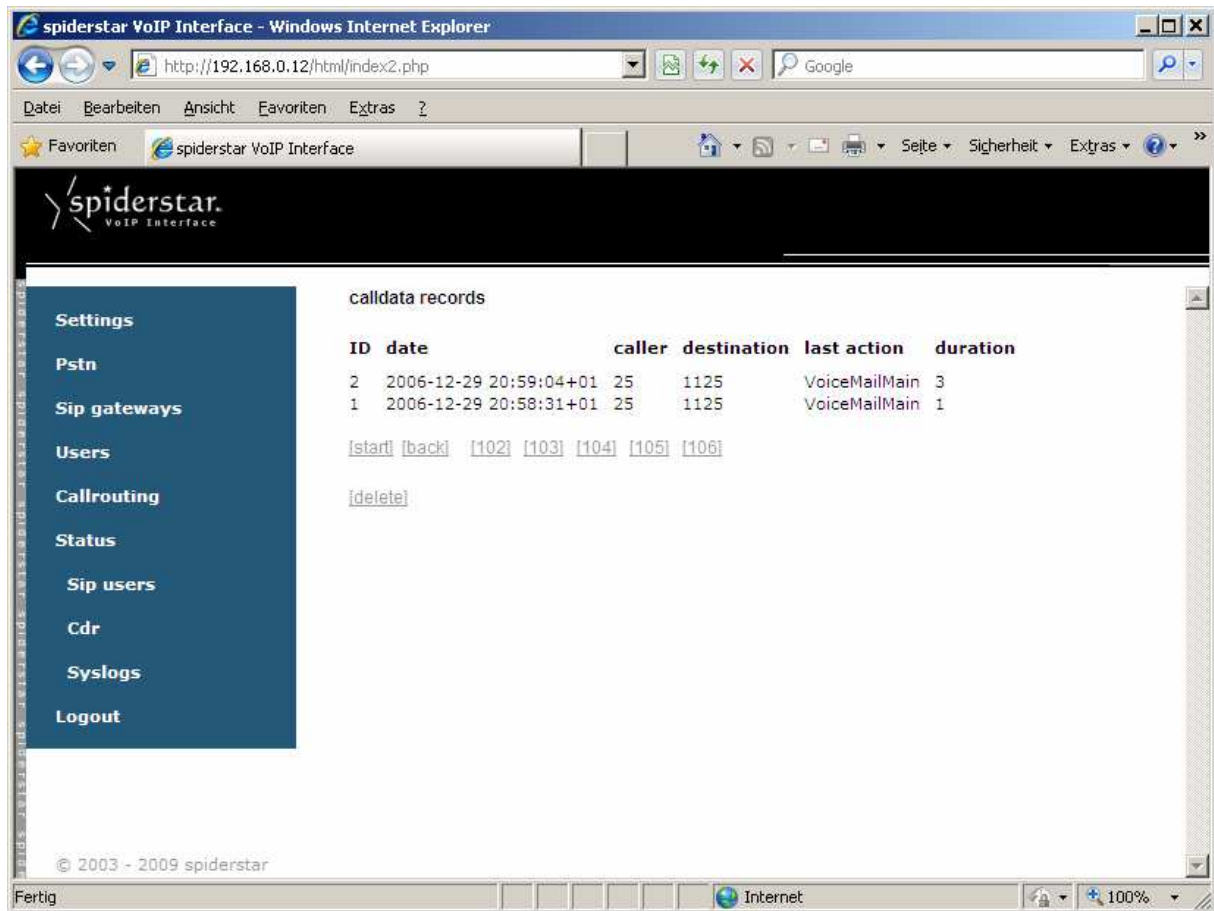

The screenshot shows a web browser window titled "spiderstar VoIP Interface - Windows Internet Explorer". The address bar shows the URL "http://192.168.0.12/html/index2.php". The browser's menu bar includes "Datei", "Bearbeiten", "Ansicht", "Favoriten", and "Extras". The page content features the "spiderstar VoIP Interface" logo and a navigation menu on the left with items: "Settings", "Pstn", "Sip gateways", "Users", "Callrouting", "Status", "Sip users", "Cdr", "Syslogs", and "Logout". The main content area is titled "calldata records" and displays a table with the following data:

ID	date	caller	destination	last action	duration
2	2006-12-29 20:59:04+01	25	1125	VoiceMailMain	3
1	2006-12-29 20:58:31+01	25	1125	VoiceMailMain	1

Below the table, there are links for "[start]", "[back]", "[102]", "[103]", "[104]", "[105]", "[106]", and "[delete]". The footer of the page contains the copyright notice "© 2003 - 2009 spiderstar". The browser's status bar at the bottom shows "Fertig" and "Internet".

## **4 Special applications**

### **4.1 special applications**

Some callrouting require spezial data to be entered in the callrouting table. For more info contact the support.

### **4.2 voicemailmenu**

To contact the voicemailmenu to record your unavailable message you have to set an internal number for the user 'Administrator'. This is the internal base number for the voicemail menu. (Default: 11). The voicemail menu of a given user can be reached then by dialing [Administrator number][user]. So e.g. if Administrator has number 11 and user has number 25 his voicemailmenu can be reached dialing 1125.

### **4.3 transfer**

To transfer a user please press '#' after that the number the call should be transferred to.

### **4.4 conference rooms**

To connect to a conference room dial '\*' and after that the room number (1-5). If you want to invite users to a conference dial the user and after that tranfer him or her to ther conference room pressing '#\*' and after that the room number.

### **4.5 database connection to cdr**

The cdr database can be accessed using ODBC for postgresql. Therefor connect to the the server and enter user postgres, password postgres and database cdrdb. The postgresql db listens on port 5433.

### **4.6 branch offices**

To interconnect 2 pbxes do the following:

- add a new ip gateway and enable incoming calls on both machines with same username/password.
- Enter one callrouting table on both machines.
- Add one user (sip) on both machines who has the same username as the user defined in the ip gateway section. Also ensure that the passwords are identical.

### **4.7 Time based routing**

To define a timebased routing please use the 'Special application' function in callrouting. As Command please enter 'GotoIftime' and as argument use '[Time]|\*|\*|\*?duo,[user],1'. e.g. 9:00-17:00|\*|\*|\*?duo,23,1

In this case a call would be directed to user 23 if it is e.g. 10:00 am. I fit is later, e.g. 06:00 pm the call would be directed to the next step in callrouting.

### **4.8 Sending faxes**

The server supports faxes with T.38 protocol. This protocol has to be supported by your carrier. If not the usual g711 codec will be used and transmission failures will be likely. On your spiderstar VoIP Interface there is a fully integrated smtp server installed. This server is responsible for sending and receiving faxes. To send a fax please create a new Email and address it to fax@[ip address of your server].

To get this working please configure your default SMTP Server to rely mails to this server or use the integrated smtp server as default mailserver for your email client.

Enter the complete fax number in the subject line of your Email and attach a pdf document to it.

After sending this email the server will start connecting to the remote fax machine immediately.